

MatrixCodeReader.exe

MatrixCodeReader.exe :

1. Windows. -> -> -> -> **Matrix.**
MatrixCodeReader.exe : , , ,
2. Tools\Hub . : : \Program Files\Tools\ Hub\ MatrixCodeReader.exe.

MatrixCodeReader.exe.

The screenshot shows a window titled 'KeyUpdate' with a blue border. Inside, there are two input fields: 'IP address' containing '127.0.0.1' and 'File name' containing 'dallas.txt'. To the right of these fields are 'Start' and 'Exit' buttons. Below the input fields are two large, empty rectangular text areas. The text 'Dallas codes' is positioned above the bottom text area.

MatrixCodeReader.exe :

1. - (1);
2. **Exit** (2);

3. Alt+F4 (3).

