


«pc521.exe».

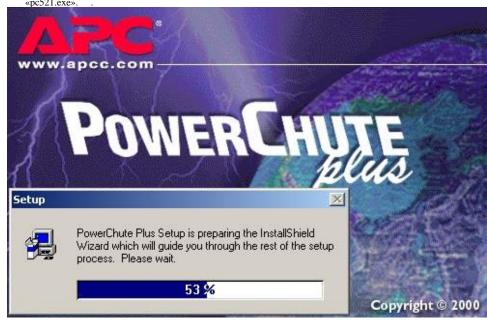


2. Continue with the installation now Next.

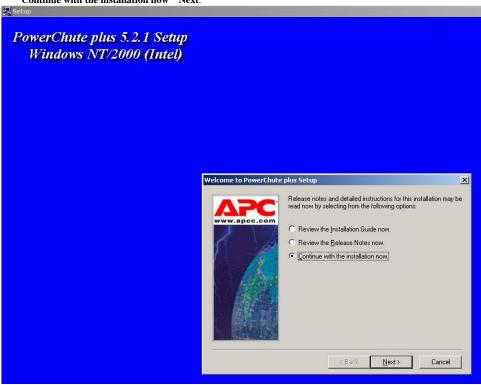


3.

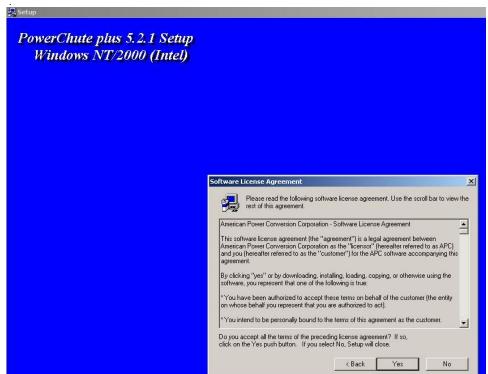


4. Typical , .

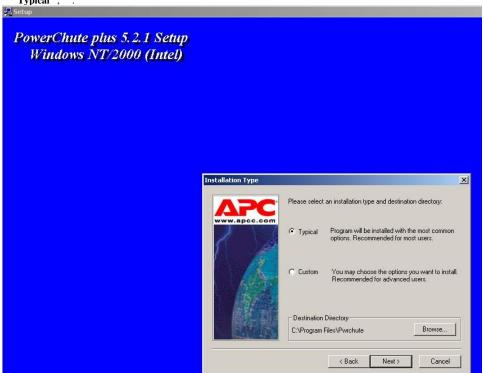


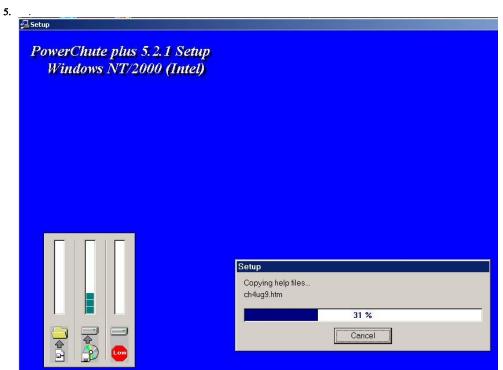


**6.** COM-, . .

 


7. Checking for UPS on COM1

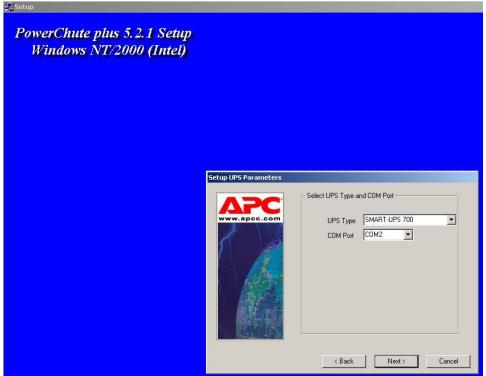

9. Enable PowerChute plus remote monitoring Next.

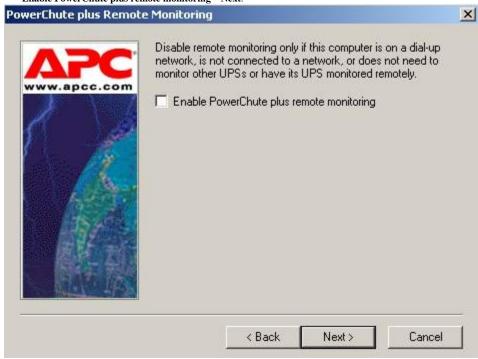

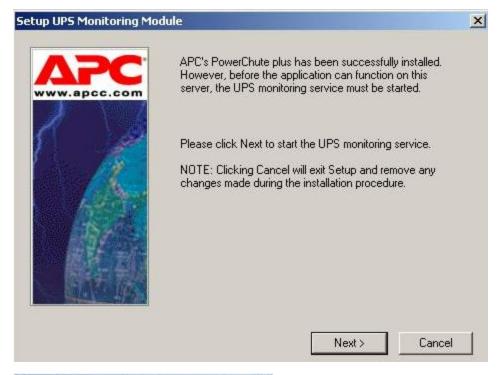



«StateUPS».