


1. \_\_\_\_"pc521.exe" "UPS\PowerChutePlus".

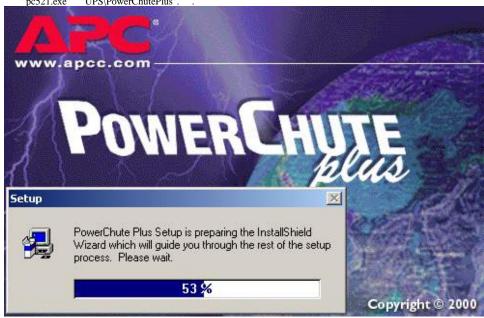



2. Continue with the installation now Next.

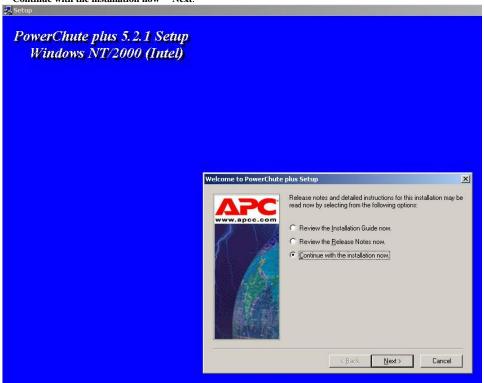


Yes

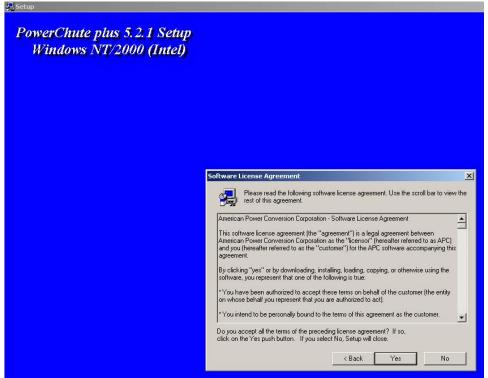

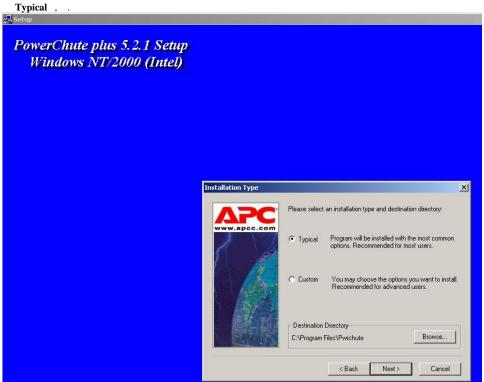


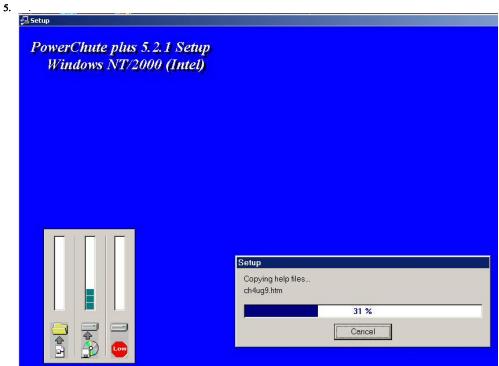


6. COM-, . .




7. . Checking for UPS on COM1

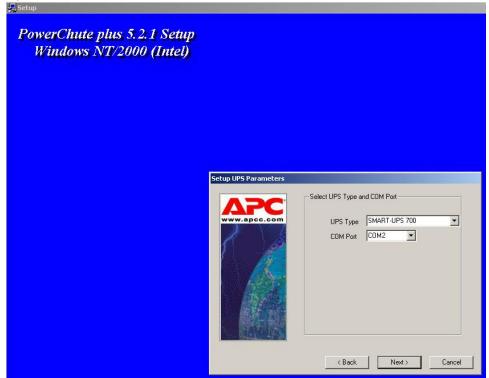

9. Enable PowerChute plus remote monitoring Next.

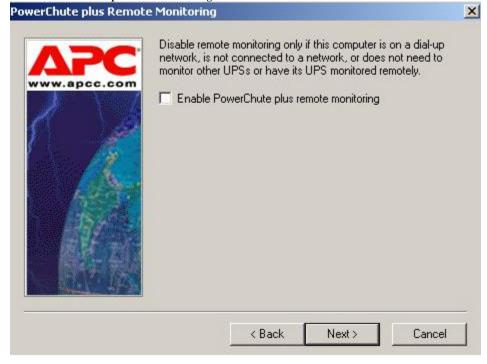

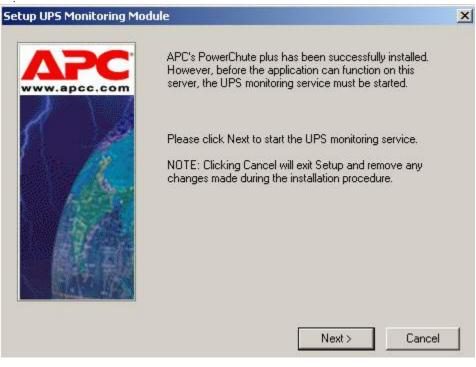



«StateUPS».